

# FLEX-LITE recessed

MOUNTING INSTRUCTIONS

## DO NOT DISCARD!

### LEGEND OF THE SIGNS



POWER OFF



POWER ON



DO NOT TOUCH  
THE LED



ATTENTION



USE ESD  
GLOVES

### TOOLS REQUIRED (not included)



PENCIL



SCREWDRIVER



DRILL



SCREWS




SPACKLE KNIFE





DRY WALL SAW


### FLEX-LITE

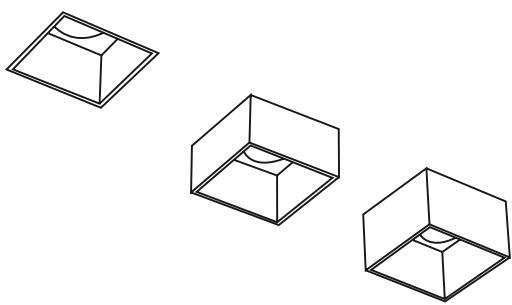



### FLEX-LITE Spot

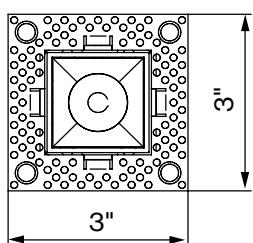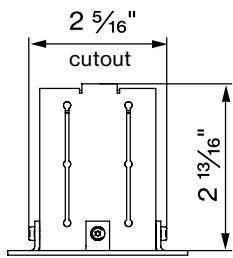


### FLEX-LITE Height sizes

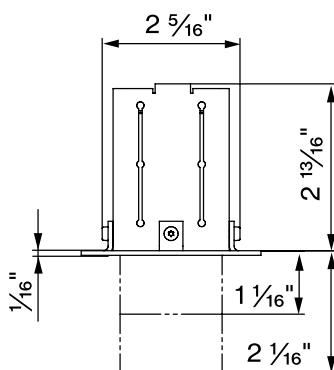

### FLEX-LITE Wallwasher

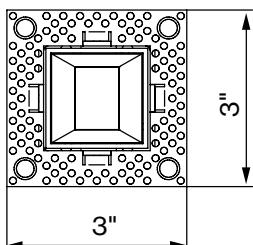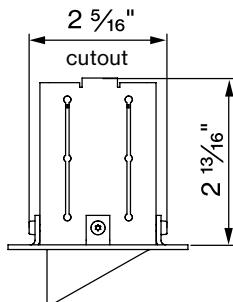


### FLEX-LITE Height sizes

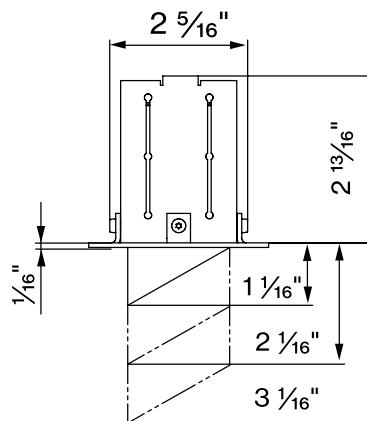

# FLEX-LITE recessed



## MOUNTING INSTRUCTIONS

### 1. Cut out hole in ceiling

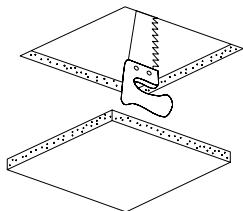


 TURN OFF POWER SOURCE BEFORE INSTALLATION \*cutout dimension above


### 2. Insert blocking into ceiling (supplied by others)

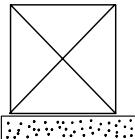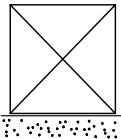


### 3. Remove inset from housing

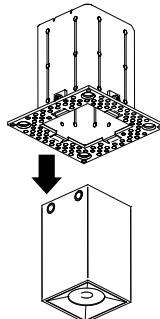


### 4. Thread power feed from power supply

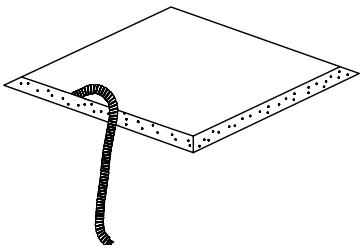


### 5. Screw mounting plate to blocks through drywall

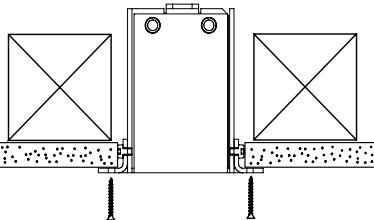


### 6. Cover gaps and flange with spackle

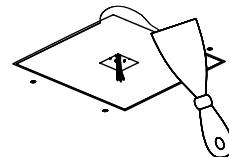


### 7. Once dry paint over spackle

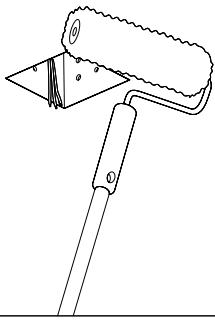

### 8. Make primary connections (connect power feed to inset)

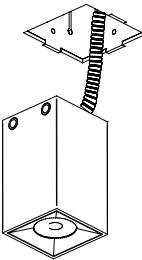


### 9. Insert inset

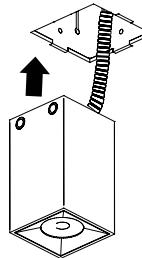


### 10. Inset can be adjusted to different heights

(see first page for different mounting heights)

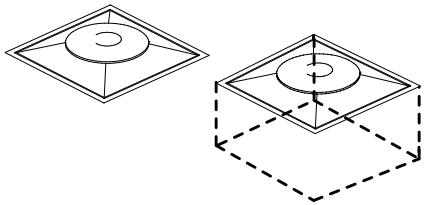


\*You will hear a click once secure

### 11. Wallwasher option available

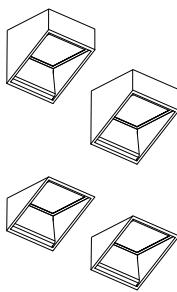

### 12. Installation Complete

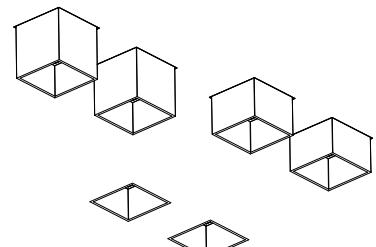


\*You will hear a click once secure


# FLEX-LITE recessed

## MOUNTING INSTRUCTIONS

FLEX-LITE has two different cell types.

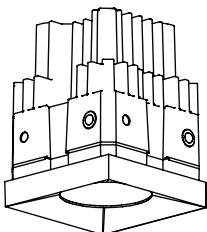


SPOT CELL

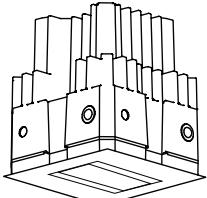


WALL WASH CELL

The cell type is also very important. SP and WW cells use two different types of drivers.


Verify that both the module and supply both list either "SP" Or "WW"

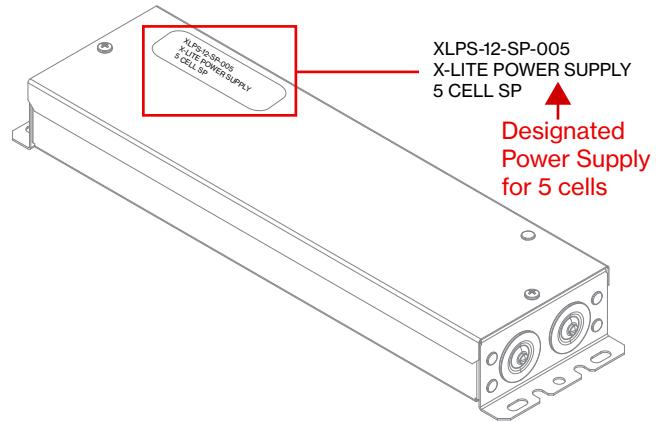

The number of cells should be the same on the labeling for the power supply and X-Lite module.

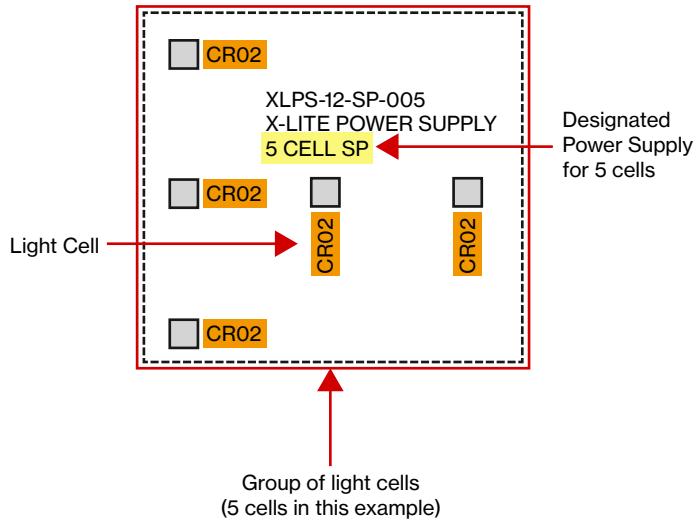

The light cell should be arranged based on the notation printed on the Power Supply labeling

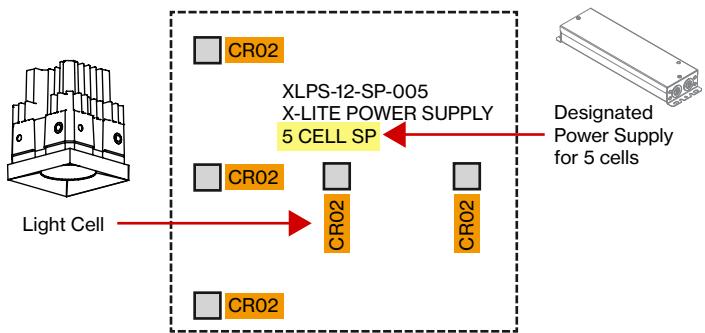

**WARNING: MAKE SURE THE CORRECT AMOUNT OF HEADS ARE CONNECTED TO EACH DRIVER. OTHERWISE HEADS WILL BURN OUT DUE TO HIGHER CURRENT. CHECK LABEL ON DRIVER "X-LITE POWER SUPPLY # CELL SP"**

